


CONCLAVE TOTEM

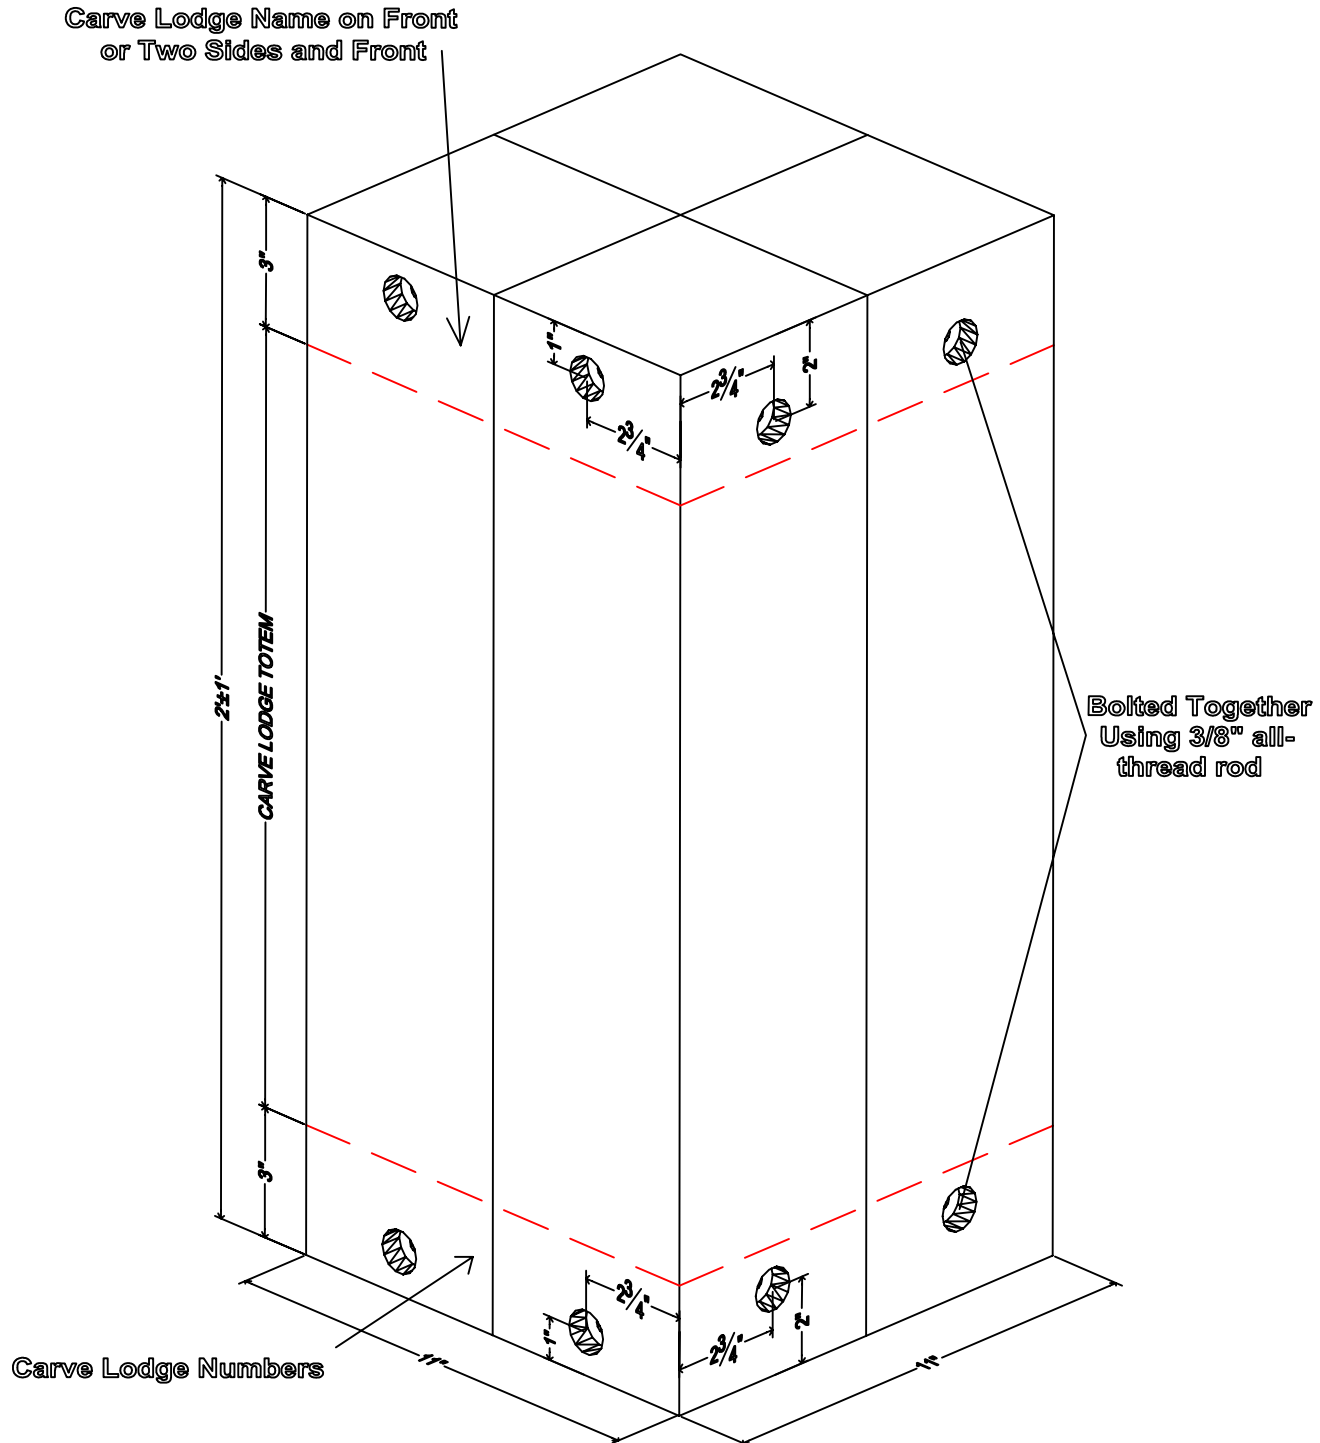

SPECIAL INSTRUCTIONS:

Use 4 pieces of pressure treated pine 6"x6".

Bolt together using 3/8" stainless steel all-thread rod with stainless steel washers and nuts.

Counter bore holes so nuts will be below the surface.

Holes will be drilled in both the top and bottom so please put bolts in exact locations.

Dowel pins will be placed at Conclave to hold totems together.

Weatherproof and paint all but the top and bottom 3".